

INSTRUCTION OF ADJUSTMENT FOR BUENO AND FERRI CASE

Cases BUENO and Ferri are designed for violin sizes 1/2, 3/4 and 4/4. Both models are addressed to young people aged 9 years and older. Use in cases attachable with Velcro sliding supporter of soundboard allows you to customize the interior to the needs of the user. By purchasing one case, a student uses it for many years, despite of the change his instrument for larger.

In order to adjust the case, follow the sequence below:

1. Remove fastened with Velcro supporter of soundboard (at the first adjustment remove placed underneath a protective sheet).



2. Hold the supporter to the appropriate part of the soundboard (in BUENO case – under the neck; in FERRI case - at the tailpiece)



3. Opposite side of the soundboard (in BUENO case – at the tailpiece; in FERRI case - at the neck), apply to the right place inside the case.



4. The part with supporter of the instrument, apply to the bottom, so that the Velcro elements joined together.



5. Remove the violin.



6. Carefully and sensitively push supporter to the bottom of your case.



If you change an instrument for a larger follow the same order.



But in order to safely remove the supporter from your case, we recommend to use a small, stiff cardboard or plastic (eg. Credit card). Insert a stiff cardboard between the connected elements of Velcro. Gently pull them in opposite directions. In this way, they divide quickly, without putting its case to damage.

The instrument in a well-adjusted case is safe in transport.

If you have any doubt, do not hesitate to contact us. We will gladly answer all your questions.